

Panel Glide

The information and advice included in this brochure has been prepared with care. However, we are unable to accept responsibility for the results of or any damage caused during operation.

As with all textiles, Luxaflex® fabrics are subject to some variations. Slight wrinkling, puckering or bowing is inherent in textile products and should be considered normal, acceptable quality. Precautions should be taken to reduce exposure to harsh environmental elements, such as salt air. Continuous exposure through open windows and doors will accelerate the fabric deterioration. Additionally, there will be slight differences in pattern alignment from the fabric on the rails to the fabric of the shade, which do not detract from the product's appeal. Variations in colour and/or pattern irregularities are unique characteristics that contribute to the classic beauty of a shade.

© Copyright 2017 Hunter Douglas Limited [ABN 98 009 675 709]. ® Registered Trade Marks of Hunter Douglas Limited. 18.017.035 C14375_08.2017



Welcome to the Luxaflex lifestyle

Thank you for purchasing Luxaflex® Panel Glide. With proper operation and care your new blinds will provide years of beauty and performance. Please review this instruction booklet thoroughly for operation and care information.

Operation

Cord operation

To draw the blind across, gently pull down on the front cord attached to the control end of the headrail. To re-open the blind, pull down on the rear cord.

Wand operation

To open and close the blind, pull the wand attached to the top of the rear panel.

Care and cleaning

Routine maintenance

Dusting

Dusting with a feather duster is all that is required to keep your Panel Glide looking good.

Spot cleaning

For the removal of dirt and grime, simply wipe fabric panels with a sponge soaked in lukewarm water. If marks are still visible add a little mild detergent. Then dry gently with a clean cloth.

